

FlashLink[®] NOW

4G Real-Time In-Transit Logger

Quick Start Guide

Activation

Push and hold the green **START** button for approximately 5 seconds. You will also see the recording icon and the temperature reading appear on the screen to indicate that the device has been activated properly.

* If the unit was not activated correctly, the screen will display a battery icon.



Temperature Scale Toggle

Once the device is activated, the temperature scale on the LCD can be changed from Celsius or Fahrenheit by double clicking the start button.



Logger Placement (Inside the container or truck):

For best cellular connection during transport, attach the logger on top of the pallet or chest high on the last pallet facing the truck or container doors.

To Attach the Logger to the Pallet:

Attach RTL to the side of the pallet using the double back foam tape on the back of the shipping card

