

Technical Note

Shadow Log® How Does it Work?

Overview

Why Shadow Log®

All too often, shipments of temperature sensitive goods arrive with data loggers that have not been started. This defeats the purpose of using this type of monitoring device, resulting in receivers not having any visibility of temperature conditions the goods were exposed to along the route. No one will know if a break in the cold chain has occurred, when it happened, at what temperature, and how long it was out of range. The whole load may be a total loss, with no evidence available when legal actions are necessary.

Guarantees Trip Data

Shadow Log® is a patented technology feature of DeltaTrak In-Transit Data Loggers. It guarantees temperature data is recorded even if the units are never started by the shipper, so that receivers will always have trip history for every inbound load. These reports provide complete information to verify if and when breaks occur in the cold chain. They help to identify who is responsible, and are used as evidence in claim situations and legal proceedings.



How does it work?

- Shadow Log® starts when the logger is programmed at the factory
- Logger records temperature data at regular intervals
- Stores in memory, ~ 80 day capacity
- Continuous loop - when memory is full, new data over writes oldest data points
- Operates with very low power, will not drain battery
- Do not press START if Shadow Log® icon is on the LCD. Pressing START will erase Shadow® data and begin normal logging at intervals based on model specifications

How can I tell when a logger is in Shadow Log® mode?



LCD with Shadow Log® icon



LCD in normal logging mode

Models without LCD: No LED lights flashing indicates logger is in Shadow Log® mode



Green LED flashing



Red LED flashing

Green LED flashing: Active logging mode

Red LED flashing: Active logging with alarm condition

Downloading Loggers with Shadow Log® Data

- Do not press START when logger arrives in Shadow Log® mode
- Press and hold the STOP button until STOP appears on the LDC without flashing
- Plug the logger into the USB port of a computer
- PDF and CSV reports are generated


Compare Reports

- Indicates if data is from Shadow Log® mode or normal logging
- Shadow Log® includes data points before the trip started
- Easy to identify and verify trip data with time/date stamp visible on the graph
- Low temperature spike shows when logger went into refrigerated or frozen truck or container
- High temperature spike at end of trip, when logger is removed from the load

Report with Shadow Log® Data



Report with Normal Data

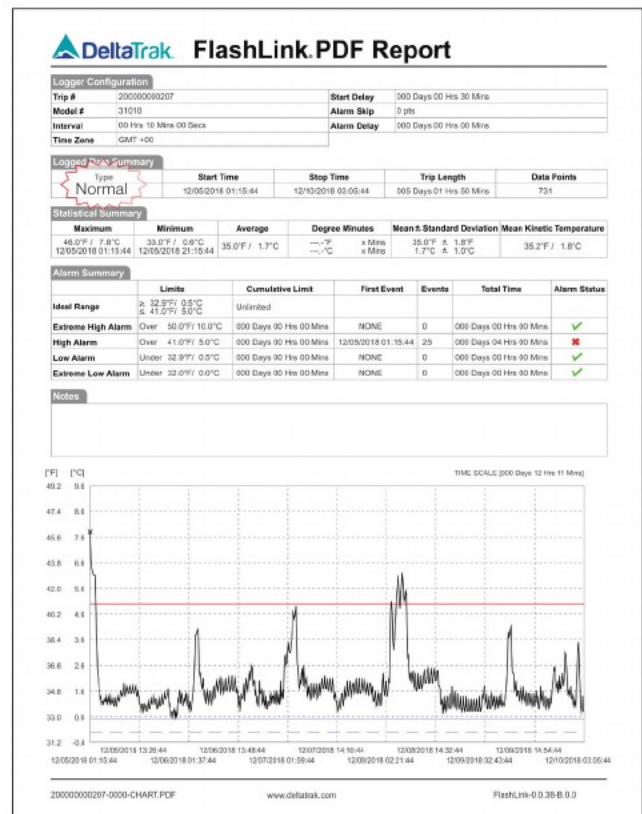

TN0005_24G1



EO: sales@eofirm.com | www.eofirm.com | 0755-84200058