

USB Interface Plus Reader

Instructions for Use



sensitech.com



EO: sales@eofirm.com | www.eofirm.com | 0755-84200058

EO: sales@eofirm.com | www.eofirm.com | 0755-84200058

© 2020 Carrier. All Rights Reserved.

T83001330 Rev. D • 24 Sep 2020

EO Temperature Control | sales@eofirm.com | www.eofirm.com | 0755-84200058

Product Overview


The USB Interface Plus Reader provides the communications link between a TempTale®4 monitor and a standard USB port. It is used for downloading time-and-temperature data recorded by the monitor to your PC for viewing, analysis and archiving.

Minimum System Requirements


- PC with Microsoft Windows Requirements 2000 Professional(Service Pack 4 or above) or XP Professional (Service Pack 2 or above)
- CD-ROM drive
- USB port
- One or more of the following Sensitech applications:
 - TempTale Manager® Desktop
 - ColdStream® Cold Chain Manager Enterprise

Connecting the USB Interface Plus and USB Driver Installation

1. Insert the USB Interface Plus Driver CD into the CD-ROM drive.
2. Connect the “B” end of the USB Cable to the USB Interface Plus. (See image 1)
3. Connect the “A” end of the USB cable to a USB port on your PC. (See image 2)
4. At the “Found New Hardware” Wizard screen select “Next”. (See image 3)
5. Select the “Search for suitable driver for my device (recommended)” radio button and click “Next”.
6. Make sure the CD-ROM Drive option is selected then click “Next”.
7. At the “Device Driver Found” screen click “Next”.
8. Click “Finish” at the “New Hardware Device Found” screen.
9. You will see the “Found New Hardware” message again.
10. Repeat steps 4-8 to install 2nd file required for USB Interface Plus operation.
11. The USB Interface Plus is now ready to use.

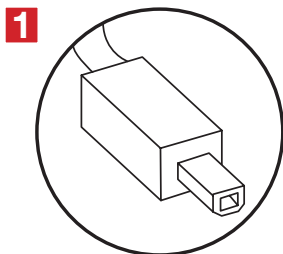

USB “B” Connector
Conector USB “B”

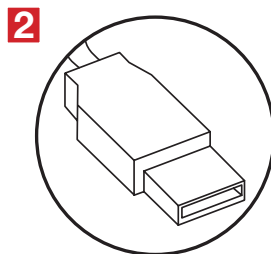

USB “A” Connector
Conector USB “A”

Descripción del Producto

El USB Interface Plus Reader, proporciona el enlace de comunicaciones entre un monitor TempTale®4 y un puerto USB estándar. Se utiliza para la descarga de datos de tiempo y temperatura registrados por el monitor a su computadora para su visualización, análisis y archivo.

Requisitos Mínimos del Sistema

- Computador con Requisitos Microsoft Windows 2000 Profesional (paquete de servicio 4 o mayor) o XP Profesional (paquete de servicio 2 o mayor)
- Unidad de CD-ROM
- Puerto USB
- Una o más de las siguientes aplicaciones Sensitech:
 - TempTale Manager® Desktop
 - ColdStream® Cold Chain Manager Enterprise

Conexión del USB Interface Plus e Instalación del Controlador USB

1. Inserte el CD del USB Interface Plus en la unidad de CD-ROM.
2. Conecte el extremo “B” del cable USB a la interface USB Plus. (Véase imagen 1)
3. Conecte el extremo “A” del cable USB a un puerto USB de su computador. (Véase imagen 2)
4. En la pantalla del asistente “Nuevo hardware encontrado”, seleccione “Siguiente” (Véase imagen 3).
5. Seleccione la opción “Buscar un controlador apropiado para mi dispositivo (recomendado)” y haga clic en “Siguiente”.
6. Asegúrese de que está seleccionada la opción de CD-ROM y luego haga clic en “Siguiente”.
7. En la pantalla “Controlador de Componente Encontrado” haga clic en “Siguiente”.
8. Haga clic en “Finalizar” en la pantalla de “Nuevo dispositivo hardware encontrado”.
9. Usted verá el mensaje “Nuevo hardware encontrado” de nuevo.
10. Repita los pasos 4-8 si desea instalar un segundo interface USB.
11. El USB Interface Plus estará listo para usarse.

