


Who Needs To Install The ColdStream Select Tray App?

If your role requires downloading and/or configuring TempTale monitors, install the Tray App.

Identify Your ColdStream Select Version

Login into ColdStream Select. Click the Menu (1) icon, About (2), the version number (3) is listed directly below ColdStream Select.

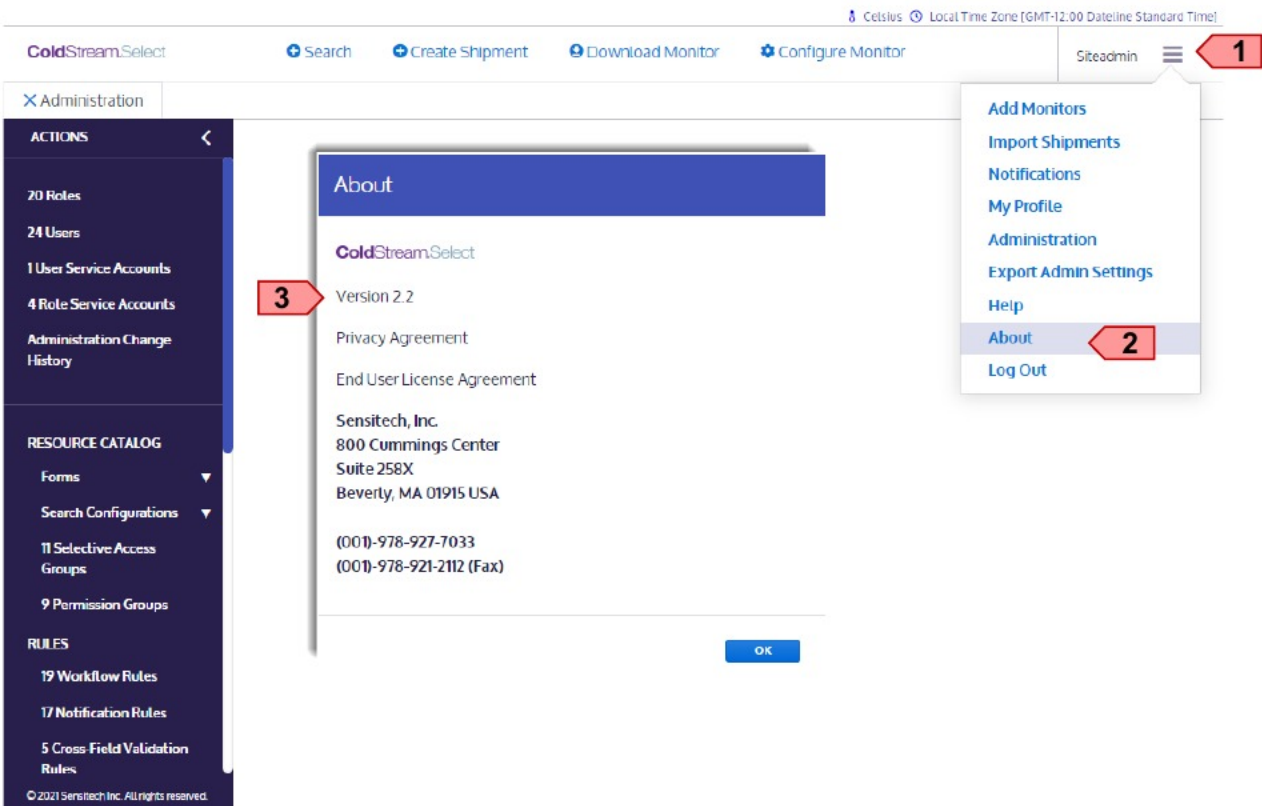

Prerequisites

Now that you have identified your version of ColdStream, if you have either version 2.0 or 2.1, then before you install the ColdStream Select Tray App, you must install the required USB driver.

Note: If you have ColdStream Select 2.2, the USB driver is automatically installed with Tray App 2.2.

Click or copy-and-paste into the Internet browser the following URL:

EO: sales@eofirm.com | www.eofirm.com | 0755-84200058
[downloads/](#)

Locate, open, and follow the **Installation Instructions** of the USB Driver that you require (1) (2).

Then, continue to page 2 of these instructions.

USB Interface Plus

For use downloading with a USB Interface Plus and our TempTale[®] RF USB cable.

- Installation Instructions 1
- USB Interface Plus Driver

TempTale[®] USB

For use configuring TempTale Ultra and TempTale USB Multi-Alarm monitors.

- Installation Instructions 2
- TempTale USB Driver

Install The ColdStream Select Tray Application

Click or copy-and-paste into the Internet browser the following URL:

EO: sales@eofirm.com | www.eofirm.com | 0755-84200058

Locate and click the **App Installer** that matches the ColdStream Select version number previously identified:

ColdStream Select **2.0** App Installer **or** ColdStream Select **2.1** App Installer **or**

ColdStream Select **2.2** App Installer **(4)**.

ColdStream[®] Select Tray Application Installer

For use with ColdStream Select for monitor configuration.

- [Installation Instructions](#)
- [ColdStream Select 2.0 App Installer](#)
- [ColdStream Select 2.1 App Installer](#)
- [ColdStream Select 2.2 App Installer](#)

4


Extract Data Files

Navigate to the Downloads folder and locate the App Installer zip folder, copy it to a location of your choice.

SensitechTrayAppInstaller**20**_tcm35-66806.zip **or** SensitechTrayAppInstaller**21**_tcm35-64186.zip **or**
CS2-2-0_SensitechTrayApp_tcm35-109363.zip


Use your Extraction software to extract the folder contents. Once extracted, locate and double click the folders **(1)** Sensitech.TrayApp.Installer | Release, click setup.exe **(2)**.

Note: Your view may vary depending on the Extraction software used.

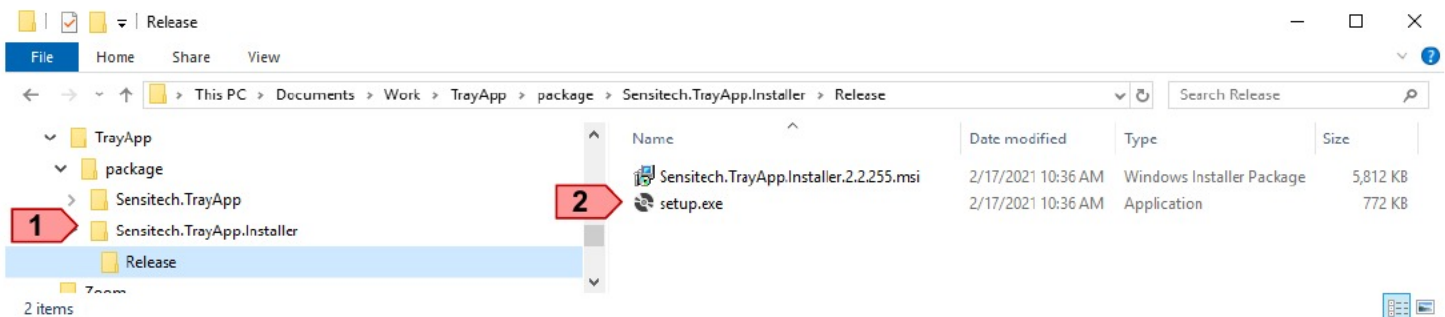


Complete The ColdStream Select Tray Application Installation

In the Sensitech Monitor Client, click the **Next (3)** prompts to complete the ColdStream Select Tray App installation. To complete the installation, click **Close (4)**.

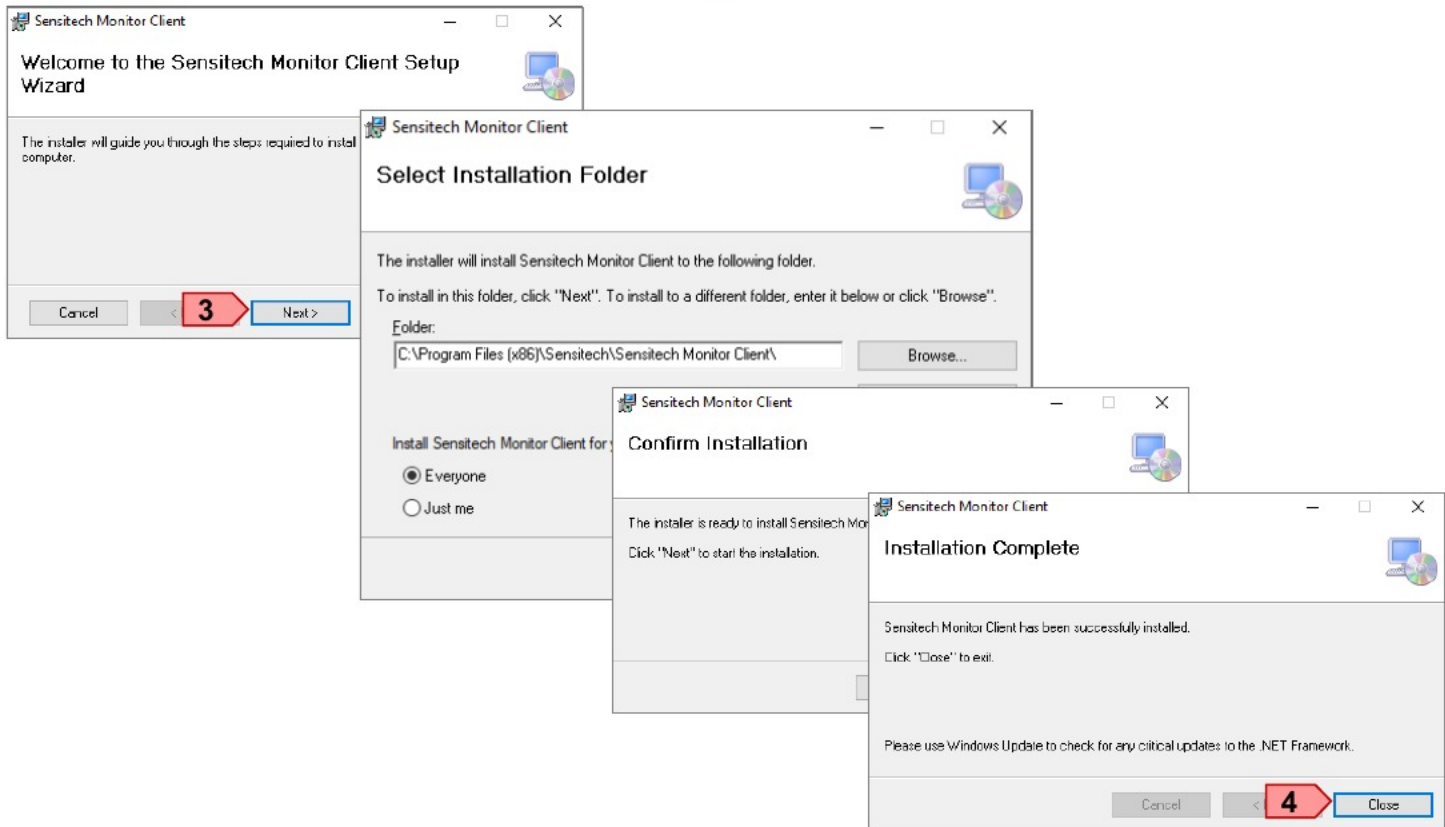


Ok, so I installed the Tray App, where is it?

To verify that the Tray App was installed successfully, open the Control Panel and locate the Sensitech Monitor Client (1).

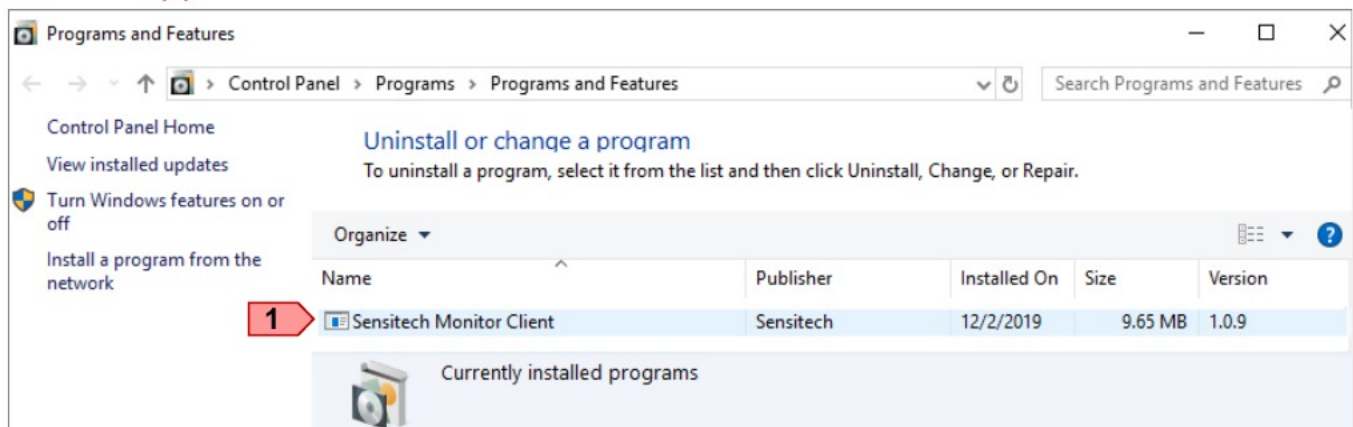

Login To ColdStream Select

From the title bar select Download Monitor (2) or Configure Monitor(3), when prompted, click **Open Sensitech.TrayApp?** to initiate communication between the monitor and ColdStream Select software.

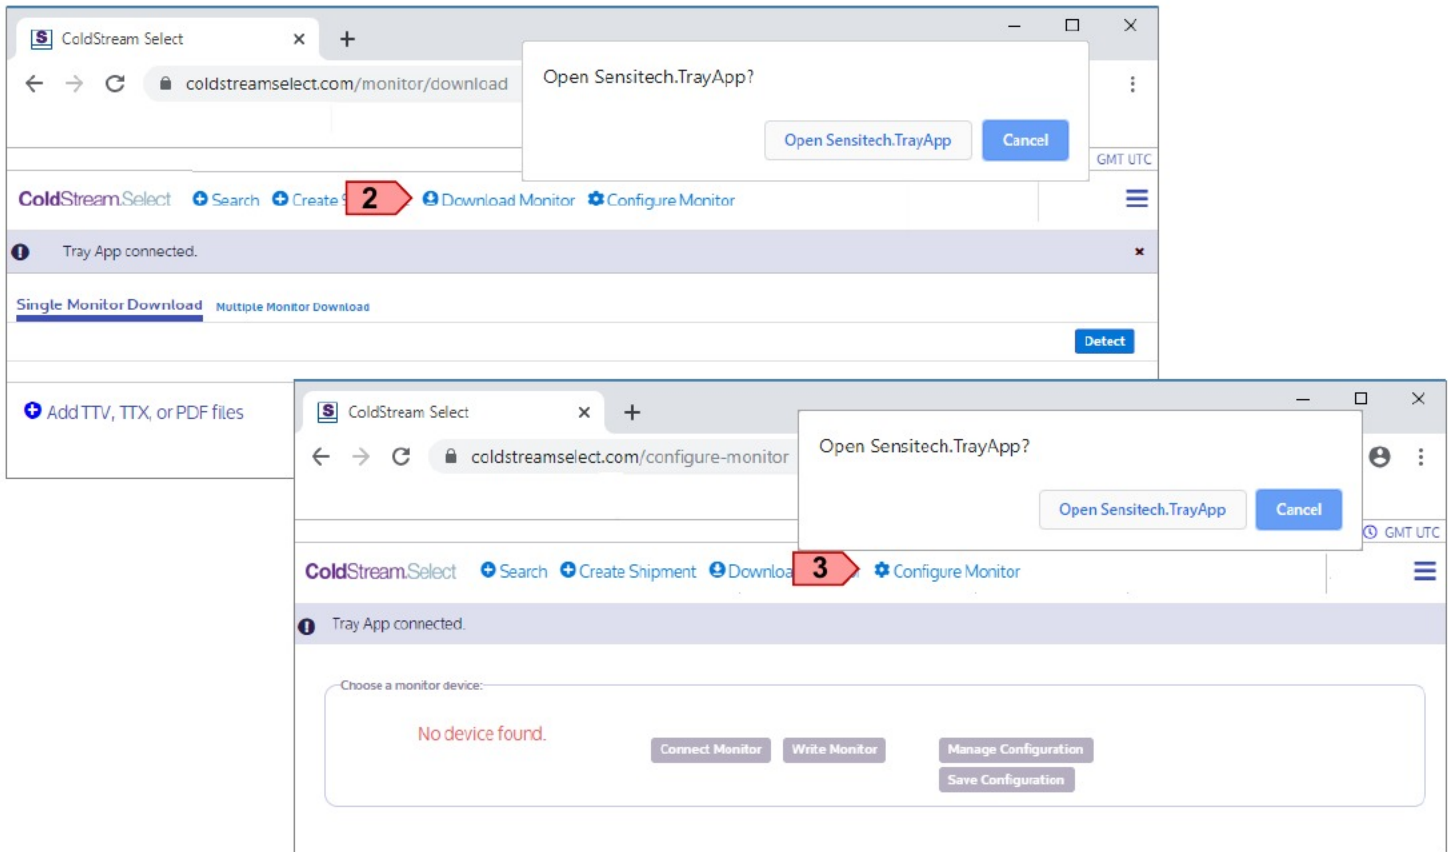

Uninstall The Tray App

To uninstall the Tray App was open the Control Panel and locate the Sensitech Monitor Client (1) and select Uninstall.

